



Installation Manual


FLIP-UP DOWNSPOUT EXTENSIONS



FLIP-UP DOWNSPOUT EXTENSION



Once the down is in place, measure how long of a flip up you will need. If possible, make it 36-48 inches. Cut it to the needed length.

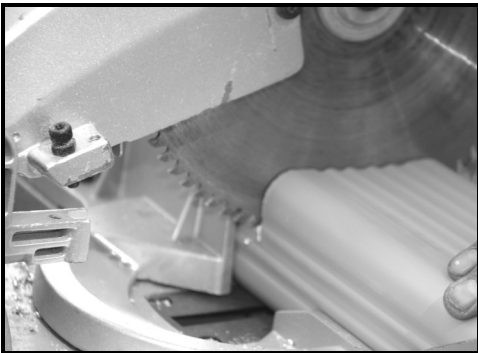


Measure in 4" from the edge of the flip up, and then cut part way through as shown.



Cut one side down to the mark you cut 4" from the top.



Bend the sides around to make it twice as thick so it will be strong where it is attached to the downspout.

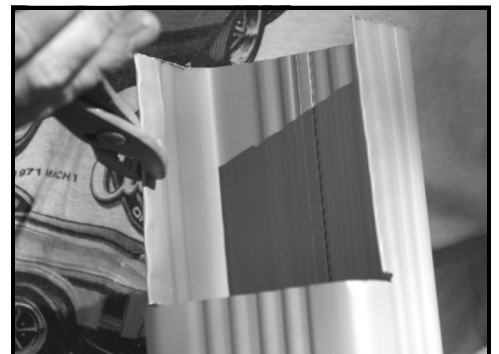



Fit the downspout into the bottom corner, but do not screw it together.



Use zip screws to temporarily attach the flip up to the bottom corner. Place the screws 1/2 inch down on each side, halfway between the bottom of the elbow and the extension.



Tip the flip-up up so it meets the downspouts. Make adjustments as needed to the bottom corner so the flip-up lines up with the downspout. Screw the bottom corner into place once everything is aligned.



Remove the zip screws you had used to temporarily attach the flip-up. Install SnapLocks to securely attach the flip-up.





Tighten the SnapLocks and add a TipLock, and the flip-up is complete and ready to use.



Completed Downspout and Flip-up. While up, the flip-up is ready for mowing and landscaping, but the homeowner should lay it flat before rain.

